

BISONPOWER



**GENERATOR
WATER PUMP
PRESSURE WASHER
ENGINE**

TAIZHOU BISON MACHINERY CO.,LTD.

**NO.1988 Haichang Road,Jiaojiang,
Taizhou City,Zhejiang Province,China**

Tel:0086-576-88205202

[Http://www.bisonpower.net](http://www.bisonpower.net)

BISONPOWER
















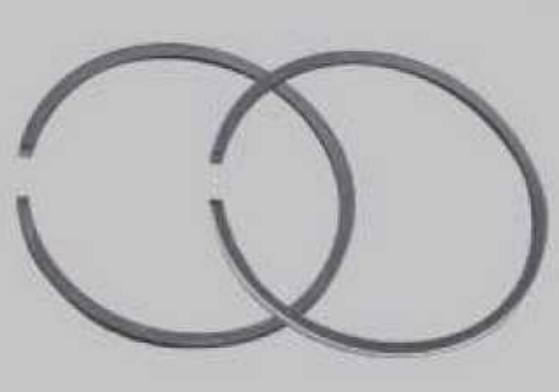 











WE ARE PARTNER, WE ARE FAMILY

GASOLINE GENERATOR PARTS

BS950



 电机端盖 Framer rear 1E45-4	 电机总成 Stator & rotor 1E45-57A	 转子 Rotor 1E45-57B	 风叶 (转子) Framer rear 1E45-57C	 M8*161mm转子螺栓 M8*161mm Bolt (rotor) 1E45-57D
 定子 Stator 1E45-48	 M6*100mm定子螺栓 M6*100mm stator bolt 1E45-58A	 曲轴箱 (左) Left Crank case 1E45-1	 曲轴箱 (右) Right Crank case 1E45-2	 防震脚 Shock proof foot 1E45-19
 曲轴 Crank shaft 1E45-3	 连杆 Connecting rod 1E45-73	 活塞 Piston 1E45-8	 活塞销 Piston pin 1E45-37	 活塞销卡簧 Clip(piston pin) 1E45-38
 活塞环 Piston ring 1E45-51	 飞轮 (塑料) Flywheel (plastic) 1E45-26	 飞轮 (铝) Flywheel (aluminum) 1E45-26A	 拉盘 Recoil starter assembly 1E45-68	 拉盘手柄 Handle (Recoil starter) 1E45-67
 卷簧 Spiral spring (recoil Starter) 1E45-50	 拉绳 Rope 1E45-55	 拉绳 (整卷) Rope (roll) 1E45-55A	 卷轮 Drum wheel 1E45-53	 棘爪 Pawl(Recoil starter) 1E45-54

 压板 Coverplate (recoil starter) 1E45-49	 压板螺丝 Coverplate screw(recoil starter) 1E45-63	 油箱 Fuel tank (with fuel gauge & handle) 1E45-59	 油箱盖 Fuel tank cap 1E45-60	 圆油位表 Fuel gauge 1E45-65
 滤网 Fuel filter 1E45-16	 油杯 Oil filter 1E45-61	 内螺纹油开关 (小杯) Fuel Tap(small) 1E45-12	 内螺纹油开关 (大杯) Fuel Tap(Big) 1E45-12A	 油箱手柄 Fuel tank handle 1E45-46
 6*30mm十字螺丝 (提手) 6*30mm Philips screw 1E45-75	 化油器 Carburetor 1E45-24	 化油器油管 Carburetor fuel hose 1E45-45	 油管卡箍 Fuel hose clip(carburetor) 1E45-74	 消声器 Muffler (light,heavy) 1E45-9
 缸体导风罩 Air scooper cylinder 1E45-47	 火花塞 Spark plug F7TC F7TC	 缸头 Cylinder head 1E45-5	 汽缸盖 Cylinder block 1E45-28	 进气阀门 Air intake valve mount 1E45-27
 点火器 Ignitor 1E45-10	 点火线圈 Ignitor coil 1E45-13	 高压包 High voltage set 1E45-62	 二合一点火器 Igniter(tow in one) 1E45-71	 面板 Panel 1E45-35
 过流保护器 Overload protector 1E45-14	 电容 Capacity 1E45-15	 长空滤器 Air cleaner (long) 1E45-25	 滤芯 Filter element 1E45-39	 电压表91L4 Voltage meter 91L4 1E45-56
 T型插座 T type socket 1E45-11	 纸垫片 (缸头) Paper gasket (cylinder head) 1E45-72	 垫片 (缸头) Gasket(cylinder head) 1E45-32	 消声器垫片 Gasket(muffler) 1E45-33	 缸体垫片 Gasket (cylinder block) 1E45-30
 垫片 (化油器入口) Gasket(carburetor) 1E45-34	 垫片 (化油器出口) Gasket (carburetor outlet) 1E45-76	 垫片 (进气阀门) Gasket (air intake valve mount) 1E45-36	 固定片 (化油器) Gasket (carburetor) 1E45-43	 调速臂 Speed regulating arm 1E45-31

 


GASOLINE GENERATOR PARTS

BS1500A, BS1500T 1000W

汽油发电机配件



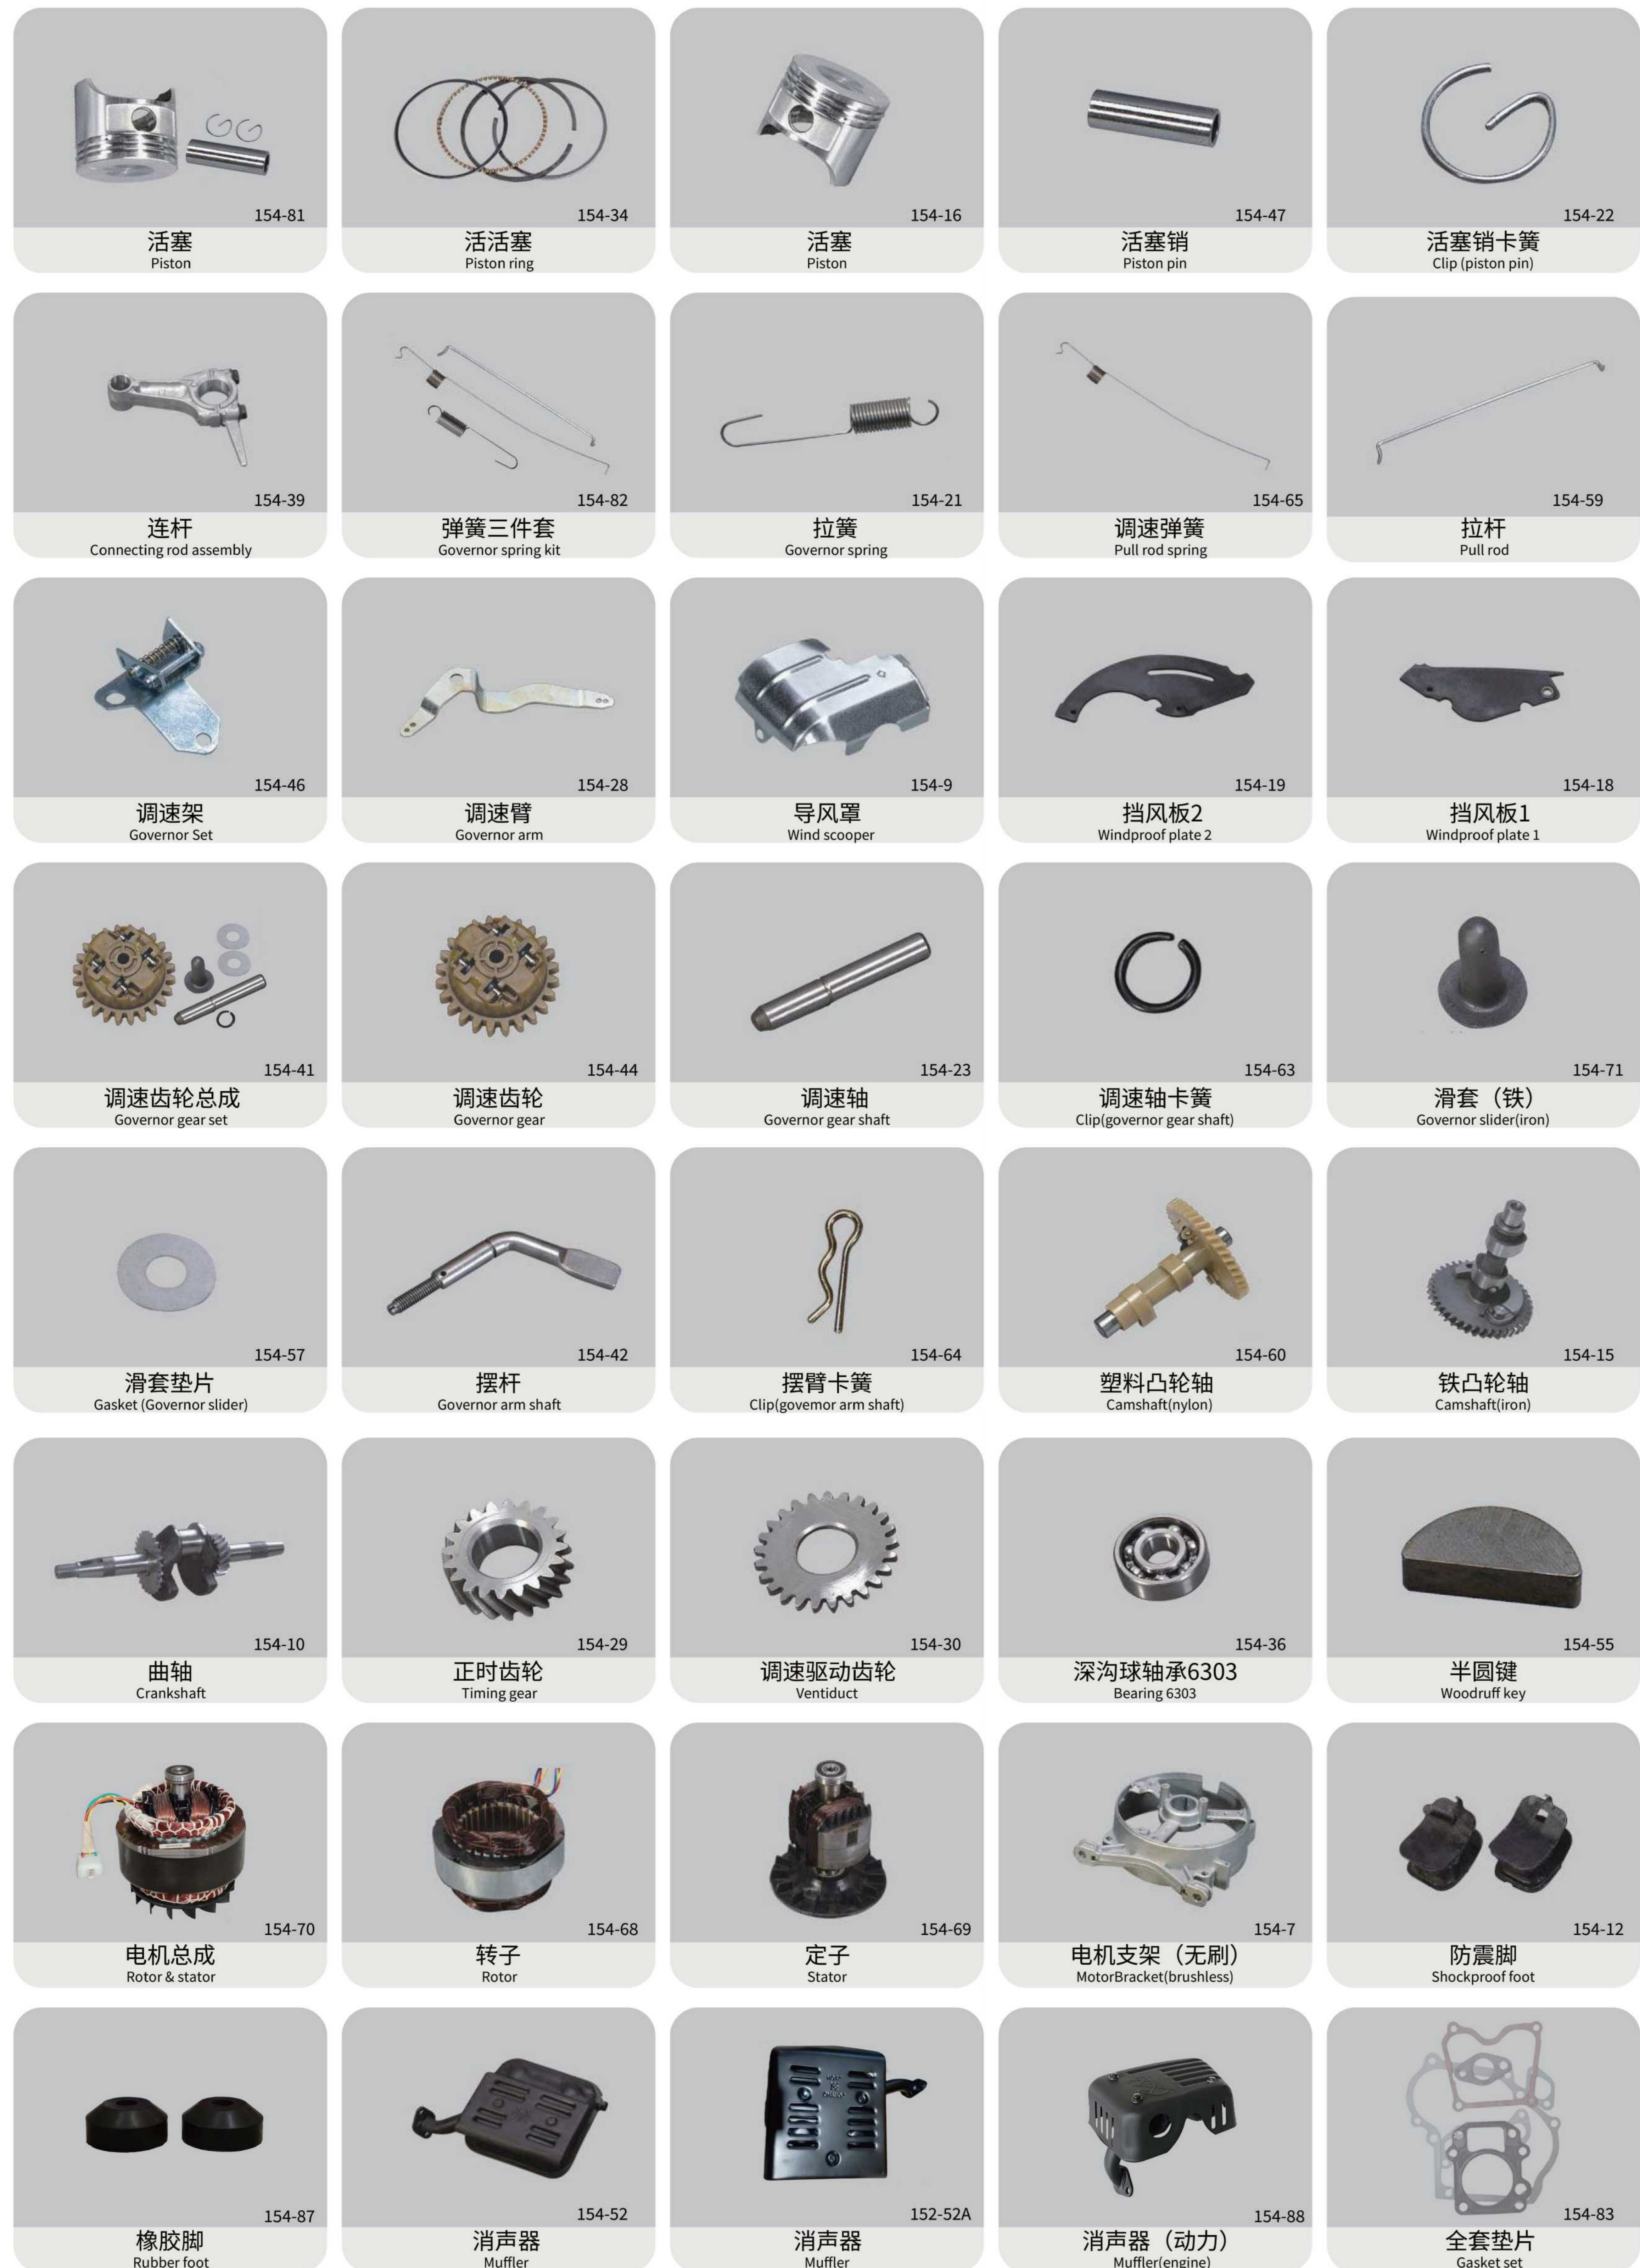 


GASOLINE GENERATOR PARTS

BS2500汽油发电机配件





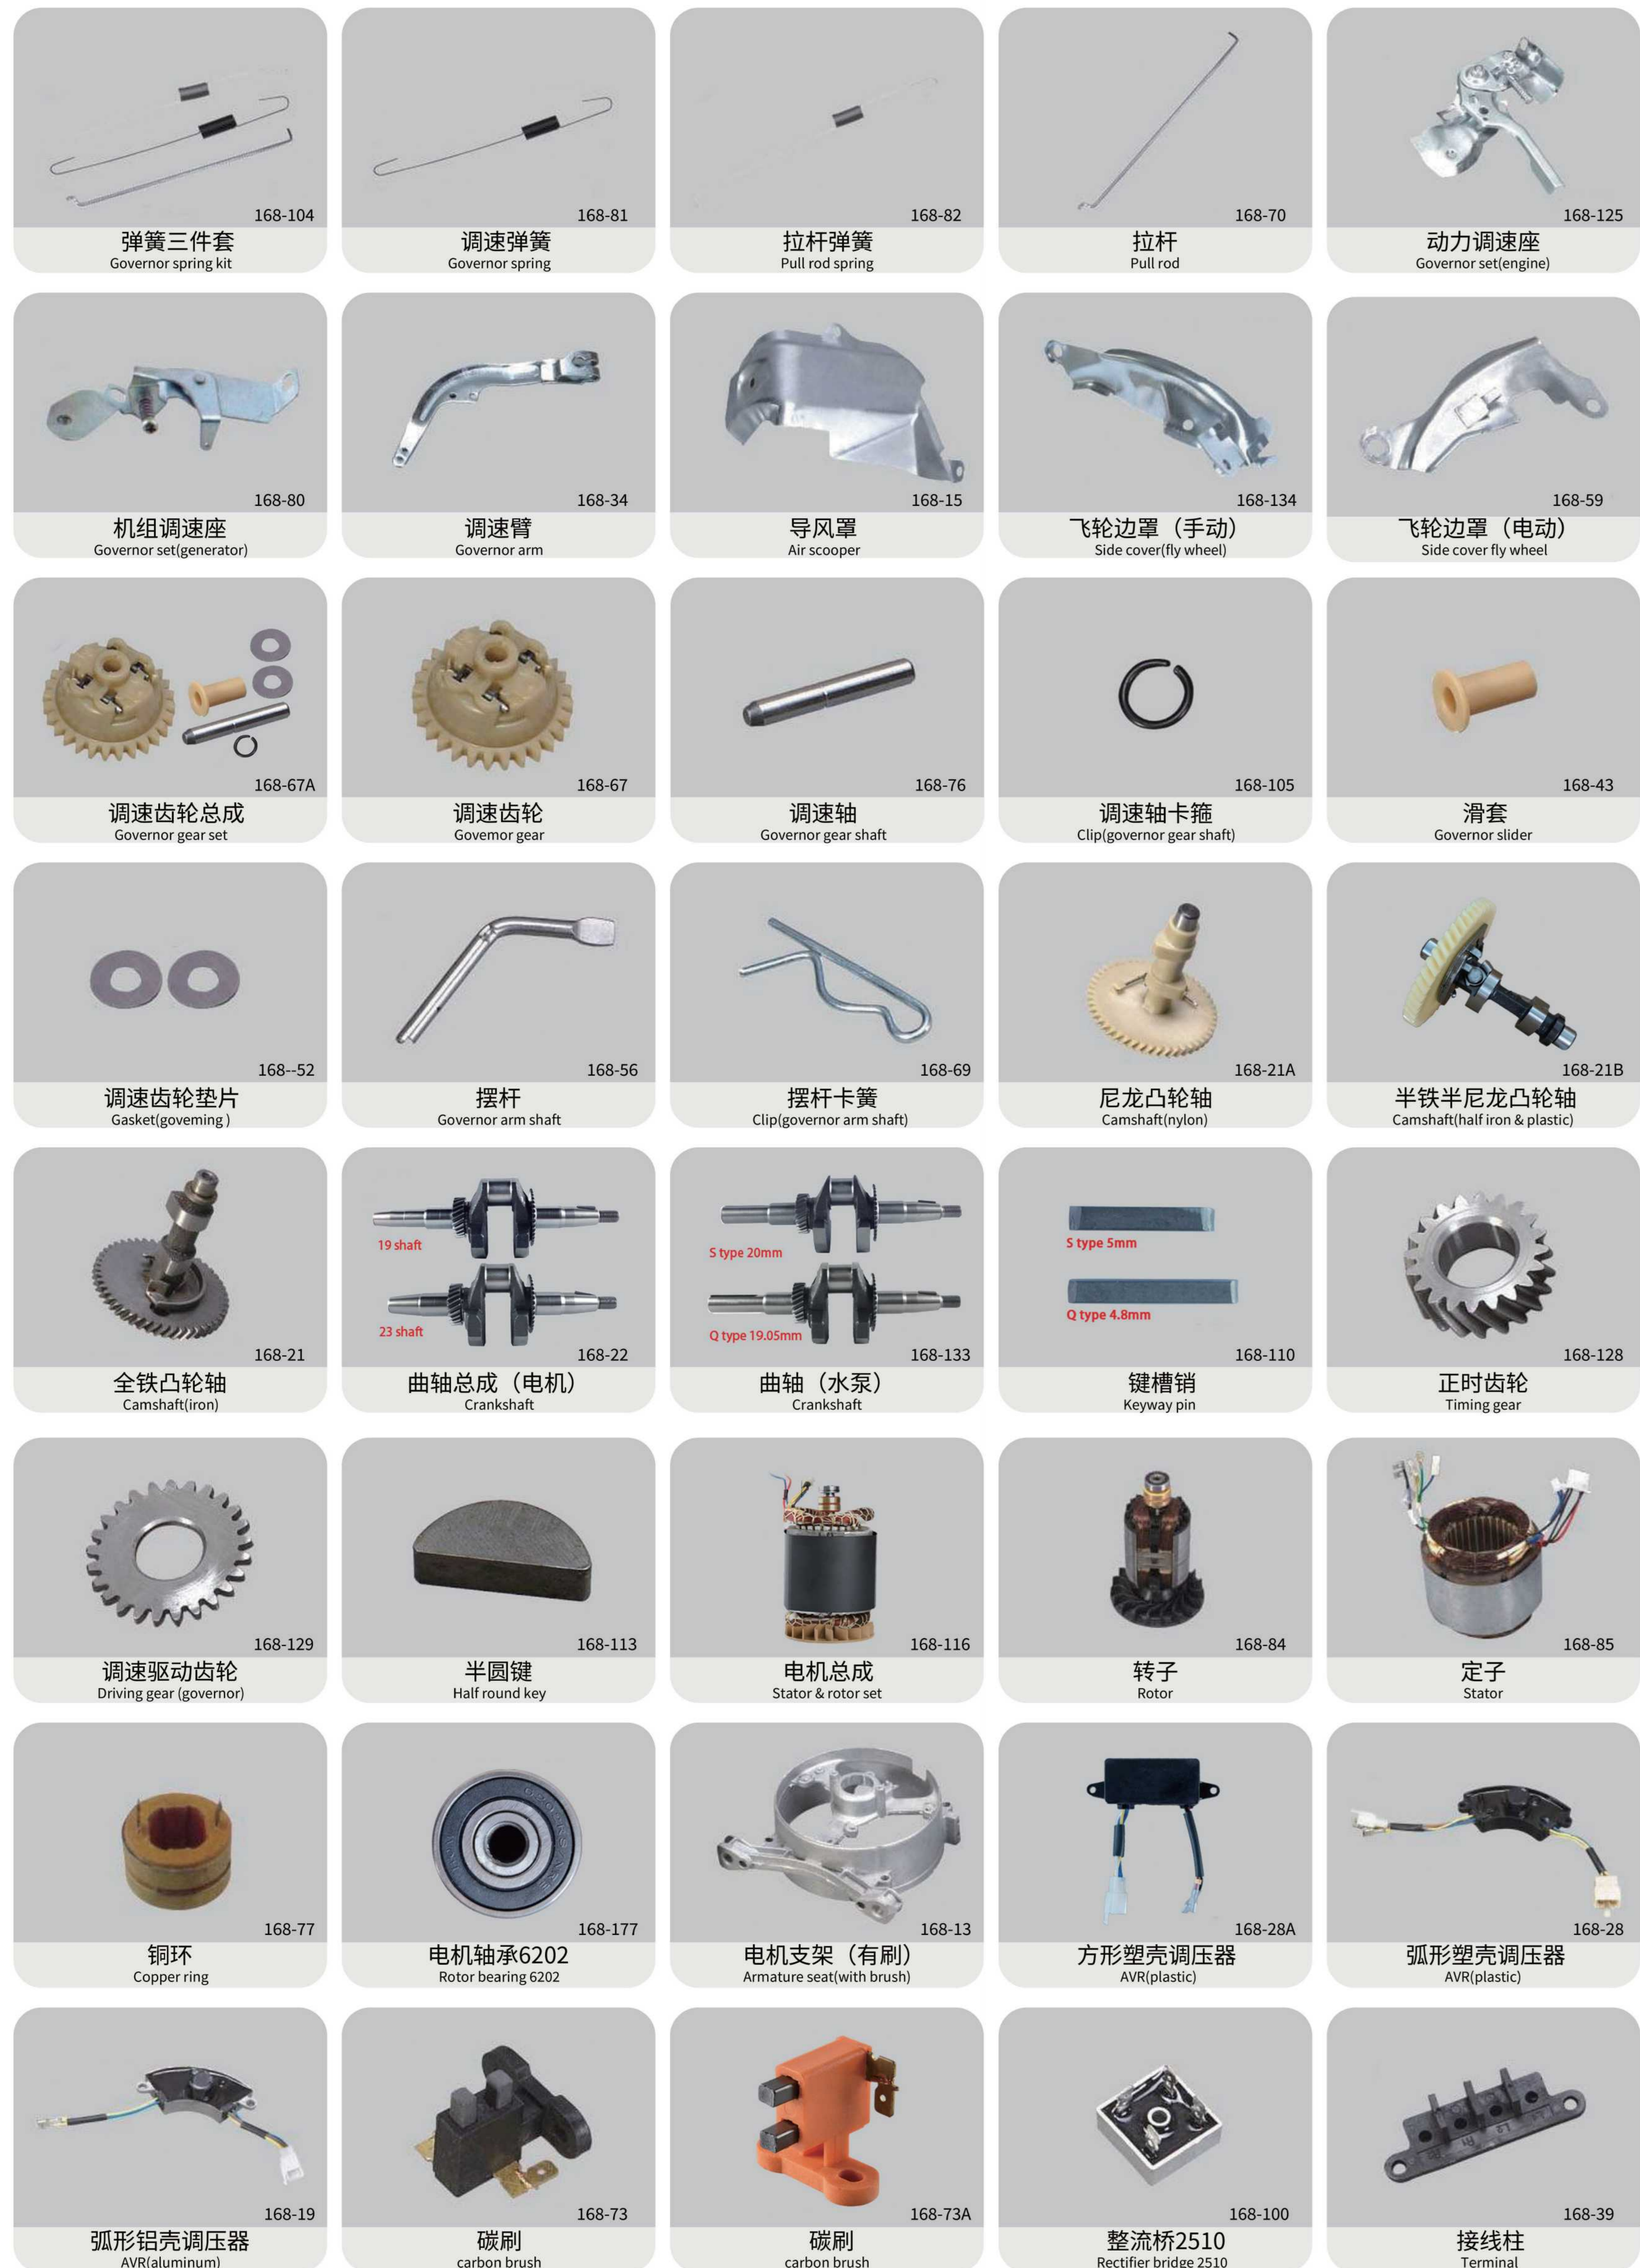

GASOLINE GENERATOR PARTS

汽油发电机配件



 188-89 拉盘 Recoil starter	 168-78 拉盘手柄 Handle(recoil starter)	 188-88 卷簧 Pawling spring starter
 188-13 拉绳 Rope	 188-13A 拉绳(整卷) Rope(roll)	 188-9 卷轮 Drum wheel(recoil starter)
 168-6 棘爪弹簧 Pawl spring(recoil starter)	 168-96 铁压板 Iron cover plate(recoil starter)	 168-95 塑料压板 Plastic cover plate(recoil starter)
 168-97 压板螺丝 Cover plate screw(recoil starter)	 188-29 启动杯 Starter pulley(iron pawl)	 168-65 铁棘爪 Iron pawl(recoil starter)
 168-98 塑料棘爪 Plastic pawl(recoil starter)	 188-8 气缸盖罩 Cylinder head cover	 188-69 高压包 High voltage set
 188-96 火花塞套筒12cm (机组) Spark plug 12cm	 168-74A 火花塞套筒16cm (机组) Spark plug 16cm	 F7TC F7TC 火花塞 F7TC spark plug
 188-2 缸头 Cylinder head	 188-70A 摇臂总成 Rocker arm set	 188-70 摇臂 Rocker arm
 188-71 摇臂螺栓 Rocker arm bolt	 188-34 摇臂螺母 Rocker arm nut	 188-2A 缸头总成 Cylinder head complete

 
 188-72 锁紧螺母 Nut	 188-32 进排气门 Intake Exhaust valve	 188-73 顶帽 Exhaust valve cap	 188-15 气门油封 Valve seal	 188-30 推杆支架 (铁) Push rod guide(iron)
 188-64 推杆支架 (尼龙) Push rod guide(nylon)	 188-79 气门弹簧 Valve spring	 188-42 气门弹簧下座 Valve spring retainer(low)	 188-43 进排气门座 Valve retainer	 188-46 推杆 Push rod
 188-86 挺柱 Valve lifter	 188-55 下导风板 Wind board (low)	 168-26 8*32mm 双头螺栓 8*32mm stud bolt	 188-98 8*52mm 双头螺栓 8*52mm stud bolt	 188-99 6*8*110mm 双头螺栓 6*8*110mm stud bolt
 188-100 6*8*132mm 双头螺栓 6*8*132mm stud bolt	 188-58 机组化油器 Generator carburetor	 188-38 动力化油器 Engine carburetor	 188-38A 动力化油器 (带杯) Engine carburetor(with tap)	 168-75 油管 Fuel pipe
 168-40 油管卡箍 Fuel pipe clip	 188-101 化油器手柄 (机组) Choke level(generator)	 188-102 化油器手柄 (动力) Choke level(engine)	 188-11 阻风门调节泵 Governing pump (choke valve)	 188-26 隔热板 Heat insulation
 188-65 机组空滤器 Generator air cleaner	 188-103 动力纸滤空滤器 Engine air cleaner(paper)	 188-104 动力油滤空滤器 Engine air cleaner(oil bath)	 188-105 动力纸滤空滤芯 Generator air filter(paper)	 188-106 动力油滤空滤芯 Engine air filter(oil bath)
 188-75 机组废气管 Ventiduct(generator)	 188-75A 动力废弃管 Ventiduct(engine)	 188-92 风扇罩 Fan cover	 188-61 冷却风扇 Cooling fan	 188-61A 冷却风扇 (白) Cooling fan(white)
 188-59 手动飞轮 Fly wheel	 188-60 电动飞轮 Fly wheel(electric)	 188-1 箱体(手动) Crankcase(hand start)	 188-1A 箱体 (电动) Crankcase(electric start)	 188-4 箱盖 (低) Crankcase cover(low)





DIESEL GENERATOR PARTS

柴油发电机配件

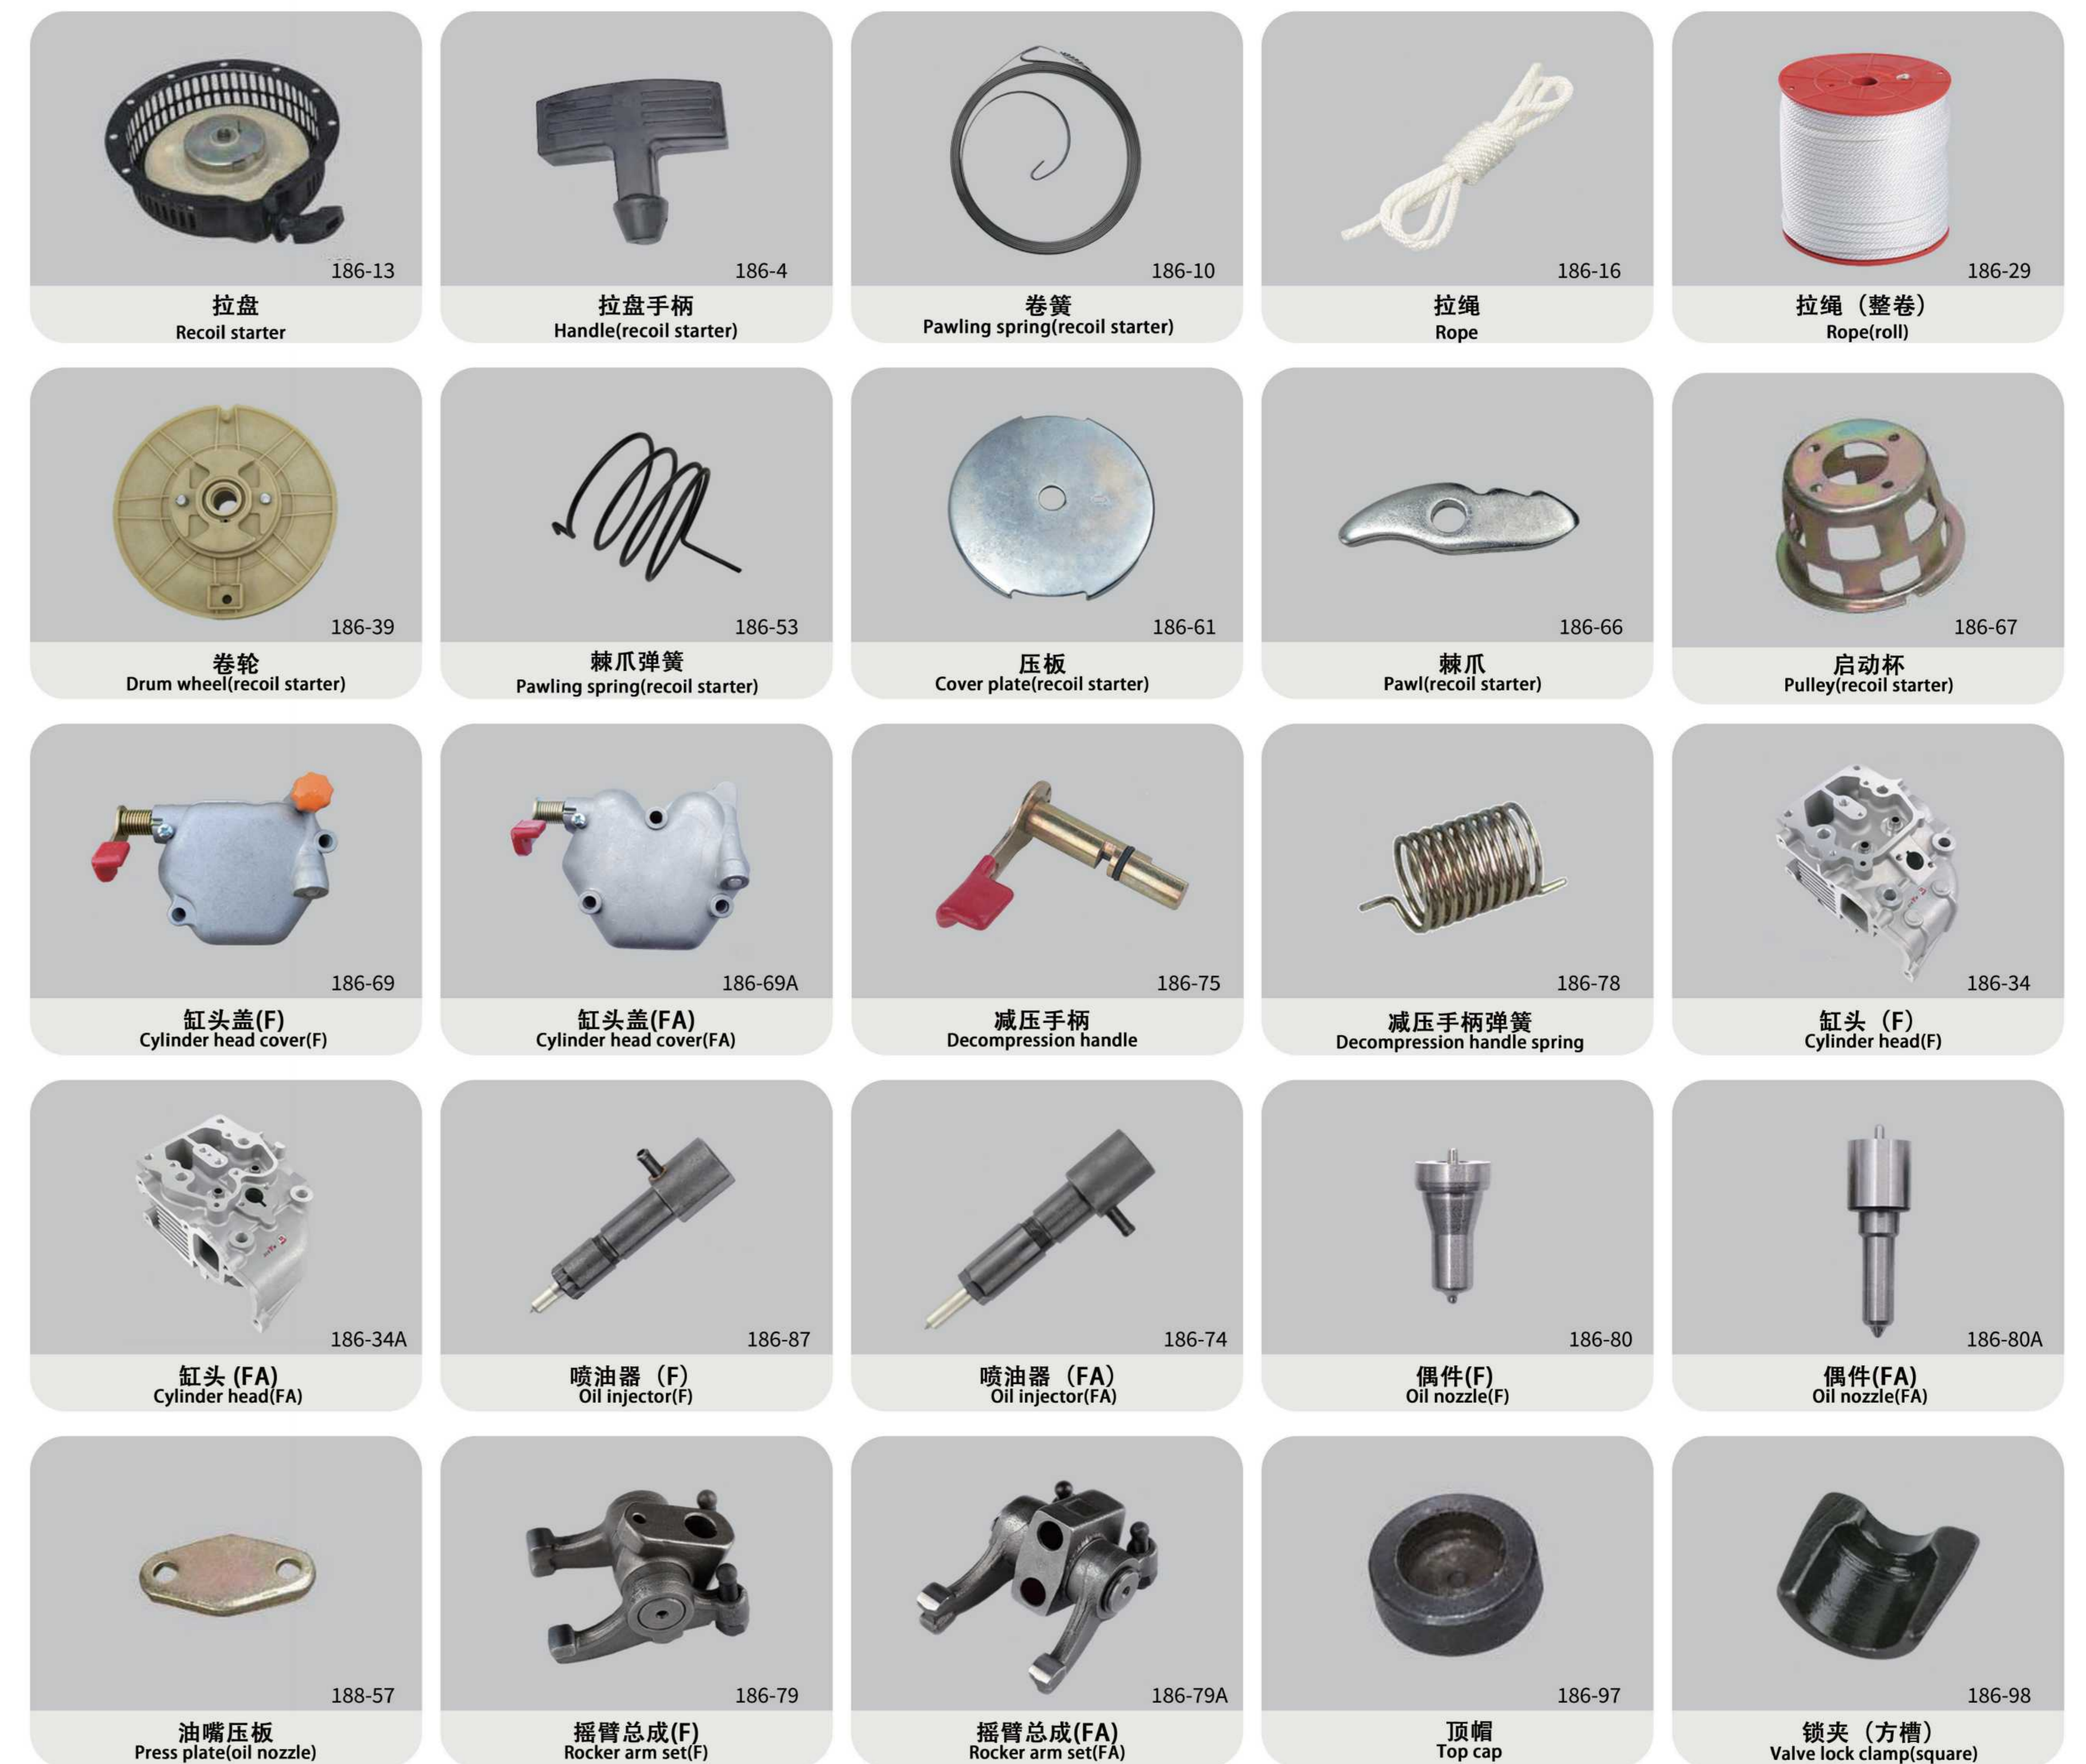







WATER PUMP PARTS

水泵配件



 WP-1 出水口 Water outlet	 WP-2 泵壳 Pump case	 WP-3 泵盖 Pump cover
 WP-4 塑料管接 Plastic connector	 WP-5 扳手 (塑料) Connector screw (Plastic)	 WP-6 铝管接 Aluminum connector
 WP-7 扳手 (铝) Connector screw (Aluminum)	 WP-8 平垫 (管接垫片) Connector gasket	 WP-9 卡箍 Hose clip
 WP-10 进水口 Water inlet	 WP-11 拍门 Water inlet gasket	
 WP-12 涡壳 Swirlingshell	 WP-13 叶轮 Impeller	 WP-14 堵头 Blocker
 WP-15 水封 Water seal	 WP-16 水封 (拖泵) Water seal (Belt pump)	
 WP-17 涡壳垫片 Swirlingshell gasket	 WP-18 泵盖垫片 Pump cover gasket	 WP-19 方垫 Square gasket
 WP-20 进水滤网 Inlet strainer	 WP-24 钢丝进水管 Water inlet hose	
 WP-21 泵体总成 (塑接) Pump complete (Plastic connector)	 WP-22 泵体总成 (铝接) Pump complete (Aluminum connector)	 WP-23 水带 Water outlet hose



GASOLINE GENERATOR PARTS

汽油发电机面板配件

 CP-1 欧插插头 European plug	 CP-2 欧插插座 European socket	 CP-3 小美式防松插头 American locking plug	 CP-4 小美式防松插座 (短脚) American locking socket (short)	 CP-5 小美式防松插座 (长脚) American locking socket (long)
 CP-6 澳插插头 Australian plug	 CP-7 澳插插座 Australian socket	 CP-8 南非插头 South Africa plug	 CP-9 南非插座 South Africa socket	 CP-10 中国国际插头 Chinese plug
 CP-11 中国国际插座 Chinese socket	 CP-12 英氏插头 British plug	 CP-13 英式插座 British socket	 CP-14 法式插头 French plug	 CP-15 法式插座 French socket
 CP-16 小美式插头 American plug (small)	 CP-17 美式双联插座 American twin socket	 CP-18 日式插头 Japanese plug	 CP-19 日式插座 Japanese socket	 CP-20 三孔工业插头 Industrial plug 3pin
 CP-21 三孔工业插座 Industrial socket 3pin	 CP-22 五孔工业插头 Industrial plug 5pin	 CP-23 五孔工业插座 Industrial socket 5pin	 CP-24 30型断路器 30 type breaker	 CP-25 50型断路器 50 type breaker
 CP-26 1P 断路器 1P breaker	 CP-27 3P 断路器 3P breaker	 CP-28 电压表 91L4 Voltage meter 91L4	 CP-29 电压表 MU45 Voltage meter MU45	 CP-30 电压表 99T1 Voltage meter 99T1
 CP-31 电压表 52型 Voltage meter 52type	 CP-32 4线电门锁 Electronic door lock 4 wires	 CP-33 6线电门锁 Electronic door lock 6 wires	 CP-34 柴油机电门锁 Electronic door lock diesel type	 CP-35 船型开关 Rocket switch



CP-36

手拨开关
Tumbler switch



CP-37

12V保护器
12V protector



CP-38

过载保护头
Overload protector



CP-39

钮子开关9脚
Toggle switch 9 male tab



CP-40

钮子开关6脚
Toggle switch 6 male tab



CP-41

整流器
Rectifier



CP-42

接线柱
Terminal



CP-43

950船型开关
950 generator on-off switch